



Practical Hints

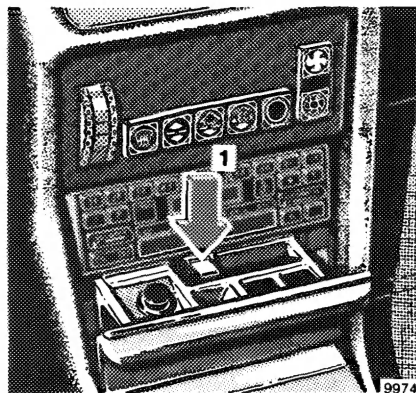

Ash trays


To remove front ash tray:
Pull ash tray out as far as possible.
Push down the spring (1) in the center and remove ash tray.

To install ash tray:
Position ash tray squarely and push in.

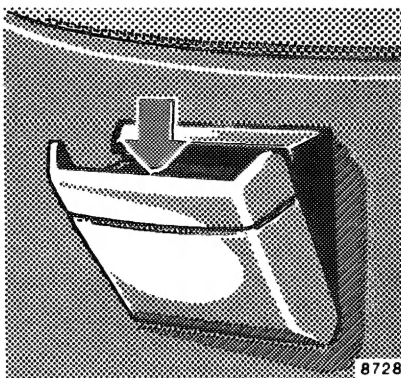

To remove rear ash tray:
Push the ash tray down while opening and remove.

To install ash tray:
Position ash tray squarely and push in.

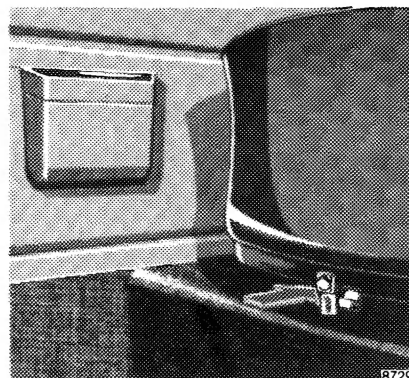

Rear Seat Cushion

Removal: Depress buttons 1 (left and right) and at the same time slightly lift up rear seat cushion at the front end (do this carefully to avoid injury). Then pull the cushion forward (Center arm rest must be folded up).

Installation: Push rear of seat cushion under seat back as far as it will go and press down on the front section until it engages.